

9040GA GAUGE ADAPTOR



THE POWER TEAM 9040GA GAUGE ADAPTORS ARE A VERSATILE TOOL FOR ANYONE INVOLVED IN MONITORING AND CONTROLLING LOADS. WHETHER YOU'RE IN THE INDUSTRIAL SECTOR, CONSTRUCTION, OR ANY APPLICATION THAT INVOLVES HYDRAULIC SYSTEMS, THE 9040GA IS DESIGNED TO MAKE YOUR JOB EASIER AND MORE EFFICIENT.

Optimized Design

One of the standout features of the 9040GA is its cleverly designed 45° angle. This angle provides an optimal viewing position for the 2.5-inch (63.5 mm) gauge that's integrated into the adaptor. This means you can easily and accurately monitor the pressure, within the hydraulic system, even in tight or awkward spaces. The 45° angle ensures that you have a clear line of sight to the gauge, which is crucial for safe and effective operations.

Key Product Features

Silicone Filled Gauge:

The heart of the 9040GA is its high-quality gauge. Silicone filling inside the gauge dampens vibrations and shock. This ensures that you can rely on the accuracy of your pressure readings, even in rugged working conditions.


3/8" NPTF Coupler w/ Dust Cover Included:

The 9040GA comes equipped with a 3/8-inch NPTF female coupler, allowing easy and secure attachment to your hydraulic system. The included dust cover helps protect the coupler when it's not in use, preventing contamination and maintaining the adaptor's performance over time.

Powerthon Lifetime Warranty:

Power Team stands behind the quality and durability of their products, and the 9040GA is no exception. The Powerthon Lifetime Warranty provides peace of mind, assuring you that this gauge adaptor is built to last. If any issues arise, you can trust that Power Team will support you throughout the lifetime of the product.

ORDER NUMBER	TECHNICAL DATA			
	LENGTH (A)	WIDTH (B)	HEIGHT (C)	WEIGHT
9040GA	5.16in	2.7in	4.37in	1.6lbs
9040GA-E	13.11cm	6.86cm	11.10cm	0.73kg

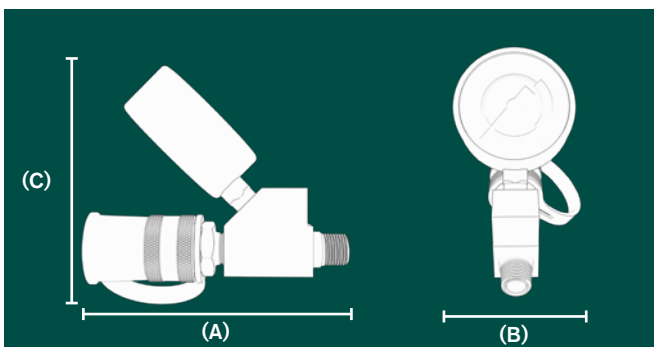

ORDER NUMBER	ORDERING INFORMATION	
	DESCRIPTION	MAX. OPERATING PRESSURE
9040GA	Gauge Adaptor, 9040 w/45 degree	10,000 psi
9040GA-E		700 bar

* -E models contain CE/UKCA compliant gauges



*SOME RESTRICTIONS APPLY

SPX FLOW®

SPX FLOW, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation. Design features, materials of construction and dimensional data, as described in this bulletin, are provided for your information only and should not be relied upon unless confirmed in writing. Please contact your local sales representative for product availability in your region. The green ">" is a trademark of SPX FLOW, Inc. For more information, visit www.spxflow.com/brand. ©2023 SPX FLOW, Inc.